MIDMARK®

Installation Instructions

9A278002 Wrist Rest Kit

KIT COMPONENTS

Part Number	Description	Qty.
029-2424-XXX	Wrist Rest Assembly	2
003-1072-00	I / O Instructions	1

REQUIRED TOOLS

Thin blade screwdriver
3/8" Wrench
1/8" diam. Punch

INTRODUCTION

To provide support for wrists during examination and general procedures.

NOTE

9A278002 Wrist Rest Kit can only be used on Models 419-003, 004, 005, and 006 with the threaded mounting holes in the headrest housing.

For units without mounting holes use Wrist Rest Kit (002-0647-00).

INSTALLATION

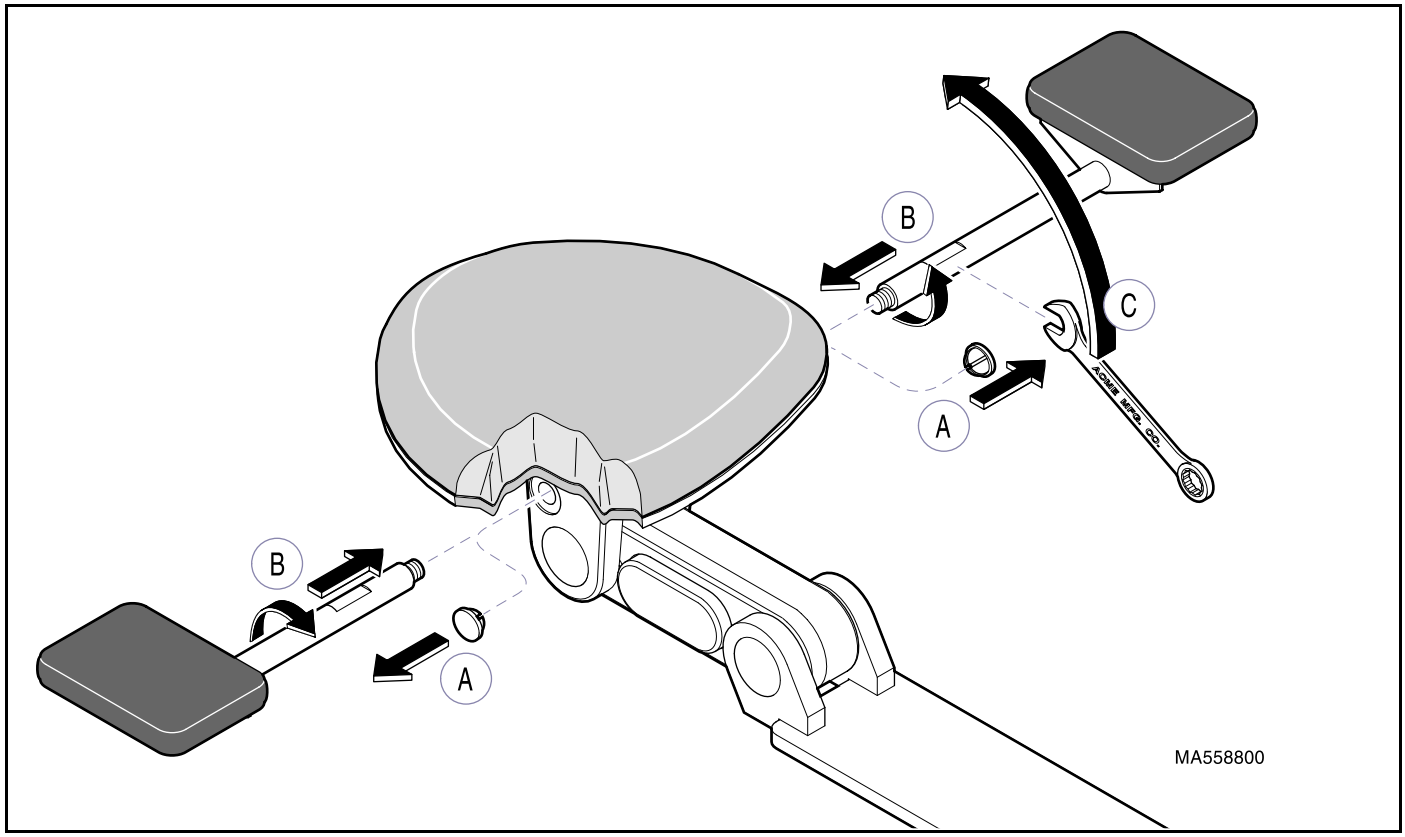

A. Remove hole plugs from head rest.
B. Hand thread each wrist rest assembly into mounting holes.
C. Tighten wrist rest assembly using a 3/8" wrench.

Midmark Corporation, Versailles, Ohio 45380 U.S.A.
(937) 526-3662 FAX (937) 526-5542

© Midmark Corporation - 2000